

Instructions for use

Before Using the Dishwasher/Connections
Precautions and General Recommendations
How to Fill the Salt Container
How to Fill the Rinse Aid Dispenser
How to Fill the Detergent Dispenser
Care and Maintenance



Bauknecht

Before Using the Dishwasher/Connections

1. Removing the packaging and controls:

- After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Water and electrical connections

All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations.

The appliance must only be used in the household for the prescribed uses.

Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

(Refer to the separate installation instructions booklet)

3. Water inlet and drain:

- Observe any special regulations issued by your local Water Board.
- Make sure the inlet and drain hoses are kink-free and are not crushed.
- If the hose length is not sufficient, please contact your local dealer or our After-Sales Service.
- The inlet hose must be securely clamped to the water tap to prevent leaks.
- The inlet water temperature varies according to the model installed. The maximum temperature allowed for the inlet hose is 60°C.
- When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the wire gauze from the sink siphon).
- Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation.
- For appliances with water-stop system only: If the water connections are made correctly, the water-stop system safeguards your home against damage caused by flooding.

4. Electrical connection:

- Closely adhere to local Electricity Board regulations.
- Voltage information is shown on the rating plate mounted inside the door on the right hand side.
- The appliance must be earthed as prescribed by law.
- Do not use extension leads or multiple adapters.
- Before carrying out maintenance, disconnect the mains plug.
- The power cable must only be replaced by a qualified technician.
- **For Austria:** if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current.

Precautions and General Recommendations

1. Packing:

- The packing box may be fully recycled as confirmed by the recycling symbol.

2. Energy and water saving tips:

- Do not rinse crockery under running water.
- Always fully load the dishwasher before switching on or set the wash programme to half load (if available) if one rack only is loaded.
- If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions.

3. Disposal

- The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal regulations.
- Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

4. Child safety:

- Children must not be allowed to play with the dishwasher.
- Store the detergent, rinse aid and salt in a dry place out of the reach of children.

5. General

recommendations:

- The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it: **the appliance may topple over!**
 - Do not use solvents inside the dishwasher: **risk of explosion!**
 - Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers.
 - Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.
 - If a fault occurs, switch off the appliance and turn off the water tap.
 - If necessary, the power cable may be replaced with another of the same kind obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
 - On completion of the programme switch off the dishwasher and turn off the water tap. For appliances with water stop system, this operation is not necessary.
- ### 6. For appliances with water stop system:
- The water inlet hose and plastic casing contain electrical components. Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately.

7. Warnings for comparative testing:

Comparative testing conditions are described in the additional "Warnings for comparative testing" page.

EC Declaration of conformity:

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:

- 73/23/EC
- 89/336/EC
- 93/68/EC



Load capacity:
9 place settings.



How to Fill the Salt Container

From a water hardness category of 1, before using the dishwasher for the first time, fill the salt container with regeneration salt (to find out the hardness level of water in your area, contact your local Water Board or check the last bill you received). If the water hardness level does not correspond to position 2 on the selector (setting on delivery) or if the water hardness level changes, set the correct water hardness level on the salt container cap or (according to the model) using system 2, 3 or 4.

System 2:

1. Press and hold the programme select button  and the On/Off button (the salt level indicator lamp will flash and the indicator lamp  e  will light up). To change the set value: press and hold the programme select button  until the required value is reached.
2. As soon as the required water hardness level is reached, press the On/Off button.

System 3:

1. Press and hold the Start button and simultaneously turn the programme dial one position to the left.
2. Release the Start button (the salt level indicator will flash and the setting value 2 will be displayed). To change the set value: press the Start button until the required value is reached.
3. When the required water hardness level is reached and the indicator lamps light up, as shown in the table, turn the programme dial to the "Off" position.



System 4:

1. Press and hold the "ECO" button and simultaneously set the mains switch to "On".
2. Release the "ECO" button (the indicator will flash and the setting value 4 will be displayed). To change the set value: press the "ECO" button again until the required value is reached.
3. When the required water hardness level is reached and the indicator lamps light up, as shown in the table, set the On/Off button in the "Off" position. The new setting is now stored in the memory.

Table of water hardness categories:

System 1

°dH	°fH	°Clarke	mmol/l	Hardness category
0 - 6	0 - 11	0 - 8	0 - 1.1	0
7 - 11	12 - 16	9 - 11	1.2 - 2.0	1
12 - 16	17 - 29	12 - 20	2.1 - 2.9	2
17 - 21	30 - 37	21 - 26	3.0 - 3.7	3
22 - 35	38 - 62	27 - 44	3.8 - 6.2	4

Table of water hardness categories:**System 2 and 3**

°dH	°fH	°Clarke	mmol/l	Hardness category	Indicator Lights
0 - 6	0 - 11	0 - 8	0 - 1.1	0	no indicator light on
7 - 16	12 - 29	9 - 20	1.2 - 2.9	1	 / 
17 - 21	30 - 37	21 - 26	3.0 - 3.7	2	 / 
22 - 35	38 - 60	27 - 44	3.8 - 6.2	3	 / 

System 4

°dH	°fH	°Clarke	mmol/l	Hardness category
0 - 6	0 - 11	0 - 8	0 - 1.1	
7 - 8	12 - 15	9 - 10	1.2 - 1.4	
9 - 10	16 - 17	11 - 12	1.5 - 1.8	
11 - 12	18 - 21	13 - 15	1.9 - 2.1	
13 - 16	22 - 29	16 - 20	2.2 - 2.9	
17 - 21	30 - 37	21 - 26	3.0 - 3.7	
22 - 30	38 - 54	27 - 38	3.8 - 5.4	
31 - 50	55 - 89	39 - 62	5.5 - 8.9	

Note: approx. 4 litres of water are required for regenerating the water softening system.
The overall water consumption per load can therefore be increased by between 0 and a max. of 4 litres according to the water hardness setting.

To fill the salt container:
Warning: only use regeneration salts for use in domestic dishwashers!

Do not fill the salt container with unsuitable substances, such as detergent, as this will cause irreparable damage to the water softener system.

1. Remove the lower rack.
2. Unscrew the cap by turning it counter-clockwise.
3. When first using the dishwasher: fill the salt container to the rim with water.

4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. 1.5 kg and max. 2 kg) and stir with a spoon handle.

5. Screw the cap back on by turning it clockwise and make sure it is properly fastened.

6. Fit the lower rack.

7. If regeneration salt is to be added, **immediately** start a wash programme (rinsing alone is not sufficient) in order to eliminate any residual saline solution straight away and avoid corrosion.

**Salt level indicator:**

The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed).

Electric indicator:

The salt level indicator lamp  on the control panel lights up when the salt container is empty.

Visual indicator:

The float is clearly visible in the cap window when the salt container is full.
The float lowers and is no longer visible when the salt container is empty.


Bauknecht

How to Fill the Rinse Aid Dispenser

The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser.

Only use rinse aids recommended for use in domestic dishwashers.

1. Press the button to open the cover.
2. Fill the dispenser with rinse aid until the level indicator becomes dark. Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results.
3. Close the cover.



How to adjust the rinse aid dosage regulator:

Factory setting:

position 4.

If you are not satisfied with washing or drying results, change the rinse aid dosage setting.

Thereafter, regularly check the rinse aid level.

1. Press the button to open the cover.
2. If crockery is prone to whitish streaks: reduce the dosage by turning the dial to a lower setting (-) using a coin or the like. If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (+).
3. Close the cover.



Rinse aid level indicator:

Visual indicator:

light add rinse aid

dark sufficient rinse aid



Additional electric indicator (if provided):

The indicator lamp  on the control panel lights up when more rinse aid needs to be added.

How to Fill the Detergent Dispenser

A special compartment is provided for the detergent. The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies for different brands. If you use detergents in pellet form, follow the manufacturer's directions for use.

"New generation" detergents contain enzymes that give better washing results when Bio programmes are used. However, these programmes are also suitable for all other dishwasher detergents.




Add the detergent:

Only use detergents recommended for use in domestic dishwashers.

Only fill the detergent dispenser prior to starting a wash programme.

1. Press the lever **A**, the cover will open automatically, sliding to the right.
2. Add the detergent:
The bottom line in the detergent dispenser indicates 15 ml of product, the middle line indicates 25 ml. The maximum capacity of the detergent dispenser is 40 ml. Always use the dosage recommended by the manufacturer.

3. Close the cover by sliding it to the left and pressing it gently. The lever will lock once more.

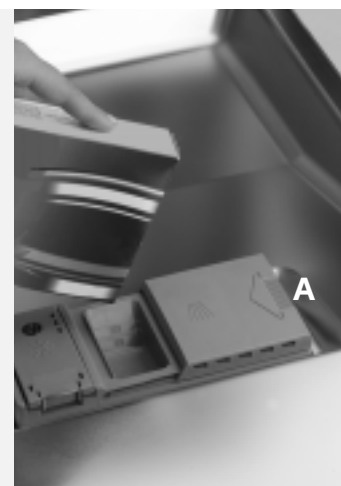



Bauknecht

Care and Maintenance

Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.

Cleaning the outside of the appliance:

To clean the outside of the appliance, use a neutral detergent and a damp cloth. Clean the control panel using a damp cloth alone. Do not use abrasive detergents.

Cleaning the inside of the dishwasher:

Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residue.


Upper spray arm:

1. Slacken the fixing nut (by turning it counter-clockwise) and detach the spray arm by pulling it down.
2. Rinse the nozzles.
3. Remount the spray arm by aligning it with the rotary mounting.

4. Tighten the fixing nut by turning it clockwise.

The fixing nut must be tightened until it clicks!

Make sure the spray arm rotates freely.

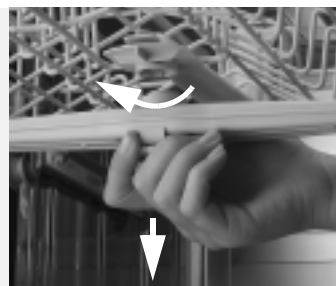

Lower spray arm:

1. Remove the spray arm by lifting it upwards.
2. Rinse the nozzles.
3. Remount the spray arm by aligning it with the rotor pin and insert it.

4. Push the spray arm down firmly until it is fixed in place.

Make sure the spray arm rotates freely.



Care and Maintenance

Cleaning the filters:

1. Unscrew the wide-mesh filter and the fine-mesh filter by turning them clockwise, and remove them.
2. Remove any food residues and wash the filters under running water.
3. Replace the filter unit and fix the wide-mesh and fine-mesh filters by turning counter-clockwise.
4. Make sure that the filters have been inserted correctly. Do not operate the dishwasher without filters and check that the filter unit is correctly assembled to ensure good wash results.

